

This machine needs to download APP software in mobile to achieve automatic splicing

Please scan the QR code to install APP in your mobile



Android



IOS



- For the first time, please do ARC calibration to ensure splicing quality.

- The fiber will be discharged firing into two sphericals when do ARC calibration (see left image).

- Please continue to operate until the phone prompts the ARC calibration is successful, please do not exit the software before it reminds you the ARC calibration is successful.

Please disconnect the charger and do ARC calibration.



Operation instruction videos are in the section "Learn How to" in the APP software (see right image)

